


Resetting Epson TM-U200b and 200 printers

When a kitchen printer is frozen or giving an error message you may need to reset the printer.

1. Turn off the printer with the power button.
2. Hold down the 'Feed' Button and while still holding this button down turn the printer back on.

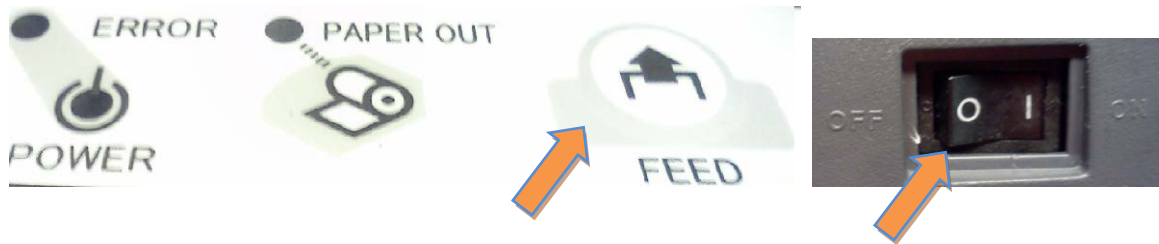

3. Once the printer turns back on you will get a print out called "Printer-Test". Once it completes you will then need to press the feed button again and you will get a printout with different characters and symbols. When this is printed the reset is complete and the printer is ready for use.
4. If the power is for any reason not turning off you can either unplug the printer from the wall outlet or from the back of the printer. The power cable has a lock sleeve at the printer end and must be pulled back for the cable to unplug.



5. To plug the cable back in simply line up the 3 prongs and plug it in.